

RRS1100 DIP Switch Table 3/24/11 Ch 2 through 63

| Main Channel | POS 1 | POS 2 | POS 3 | POS 4 | POS 5 | POS 6 | Language POS 7 |
|--------------|-------|-------|-------|-------|-------|-------|-------------------|
| 2 | OFF | ON | OFF | OFF | OFF | OFF | ON = French |
| 3 | ON | ON | OFF | OFF | OFF | OFF | OFF = English |
| 4 | OFF | OFF | ON | OFF | OFF | OFF | |
| 5 | ON | OFF | ON | OFF | OFF | OFF | |
| 6 | OFF | ON | ON | OFF | OFF | OFF | |
| 7 | ON | ON | ON | OFF | OFF | OFF | |
| 8 | OFF | OFF | OFF | ON | OFF | OFF | |
| 9 | ON | OFF | OFF | ON | OFF | OFF | |
| 10 | OFF | ON | OFF | ON | OFF | OFF | |
| 11 | ON | ON | OFF | ON | OFF | OFF | |
| 12 | OFF | OFF | ON | ON | OFF | OFF | |
| 13 | ON | OFF | ON | ON | OFF | OFF | |
| 14 | OFF | ON | ON | ON | OFF | OFF | |
| 15 | ON | ON | ON | ON | OFF | OFF | |
| 16 | OFF | OFF | OFF | OFF | ON | OFF | |
| 17 | ON | OFF | OFF | OFF | ON | OFF | |
| 18 | OFF | ON | OFF | OFF | ON | OFF | |
| 19 | ON | ON | OFF | OFF | ON | OFF | |
| 20 | OFF | OFF | ON | OFF | ON | OFF | |
| 21 | ON | OFF | ON | OFF | ON | OFF | |
| 22 | OFF | ON | ON | OFF | ON | OFF | |
| 23 | ON | ON | ON | OFF | ON | OFF | |
| 24 | OFF | OFF | OFF | ON | ON | OFF | |
| 25 | ON | OFF | OFF | ON | ON | OFF | |
| 26 | OFF | ON | OFF | ON | ON | OFF | |
| 27 | ON | ON | OFF | ON | ON | OFF | |
| 28 | OFF | OFF | ON | ON | ON | OFF | |
| 29 | ON | OFF | ON | ON | ON | OFF | |
| 30 | OFF | ON | ON | ON | ON | OFF | |
| 31 | ON | ON | ON | ON | ON | OFF | |
| 32 | OFF | OFF | OFF | OFF | OFF | ON | |
| 33 | ON | OFF | OFF | OFF | OFF | ON | |
| 34 | OFF | ON | OFF | OFF | OFF | ON | |
| 35 | ON | ON | OFF | OFF | OFF | ON | |
| 36 | OFF | OFF | ON | OFF | OFF | ON | |
| 37 | ON | OFF | ON | OFF | OFF | ON | |
| 38 | OFF | ON | ON | OFF | OFF | ON | |
| 39 | ON | ON | ON | OFF | OFF | ON | |
| 40 | OFF | OFF | OFF | ON | OFF | ON | |
| 41 | ON | OFF | OFF | ON | OFF | ON | |
| 42 | OFF | ON | OFF | ON | OFF | ON | |
| 43 | ON | ON | OFF | ON | OFF | ON | |
| 44 | OFF | OFF | ON | ON | OFF | ON | |
| 45 | ON | OFF | ON | ON | OFF | ON | |
| 46 | OFF | ON | ON | ON | OFF | ON | |
| 47 | ON | ON | ON | ON | OFF | ON | |
| 48 | OFF | OFF | OFF | OFF | ON | ON | |
| 49 | ON | OFF | OFF | OFF | ON | ON | |
| 50 | OFF | ON | OFF | OFF | ON | ON | |
| 51 | ON | ON | OFF | OFF | ON | ON | |
| 52 | OFF | OFF | ON | OFF | ON | ON | |
| 53 | ON | OFF | ON | OFF | ON | ON | |
| 54 | OFF | ON | ON | OFF | ON | ON | |
| 55 | ON | ON | ON | OFF | ON | ON | |
| 56 | OFF | OFF | OFF | ON | ON | ON | |
| 57 | ON | OFF | OFF | ON | ON | ON | |
| 58 | OFF | ON | OFF | ON | ON | ON | |
| 59 | ON | ON | OFF | ON | ON | ON | |
| 60 | OFF | OFF | ON | ON | ON | ON | |
| 61 | ON | OFF | ON | ON | ON | ON | |
| 62 | OFF | ON | ON | ON | ON | ON | |
| 63 | ON | ON | ON | ON | ON | ON | |

| Sub Channel | POS 8 | POS 9 | POS 10 |
|-------------|-------|-------|--------|
| 1 | ON | OFF | OFF |
| 2 | OFF | ON | OFF |
| 3 | ON | ON | OFF |
| 4 | OFF | OFF | ON |
| 5 | ON | OFF | ON |
| 6 | OFF | ON | ON |
| 7 | ON | ON | ON |

RRS1100 DIP Switch Table 3/24/11 Ch 64 through 69

| | | | | Language | Sub Channel | | | | | | |
|--------------|-------|-------|-------|---------------|-------------|-------|-------|-------|-------|-------|--------|
| Main Channel | POS 1 | POS 2 | POS 3 | POS 4 | | POS 5 | POS 6 | POS 7 | POS 8 | POS 9 | POS 10 |
| 64 | ON | OFF | OFF | ON= French | 1 | ON | OFF | OFF | OFF | OFF | OFF |
| 65 | OFF | ON | OFF | OFF = English | 2 | OFF | ON | OFF | OFF | OFF | OFF |
| 66 | ON | ON | OFF | | 3 | ON | ON | OFF | OFF | OFF | OFF |
| 67 | OFF | OFF | ON | | 4 | OFF | OFF | ON | OFF | OFF | OFF |
| 68 | ON | OFF | ON | | 5 | ON | OFF | ON | OFF | OFF | OFF |
| 69 | OFF | ON | ON | | 6 | OFF | ON | ON | OFF | OFF | OFF |
| | | | | | 7 | ON | ON | ON | | | |
